



Instruction video

1.

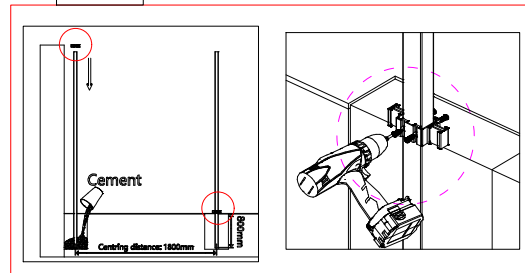


1. Fixing the steel post
(Put it 800mm into the soil and then fix it with cement).
Then fix the bottom brackets with screws.

2.

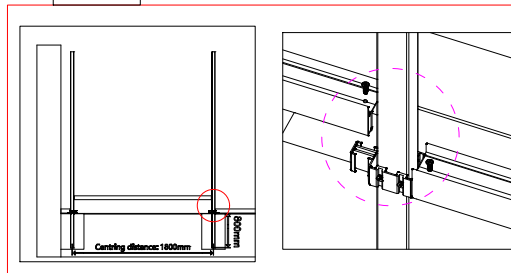


2. Fix the bottom rails on the brackets.

3.

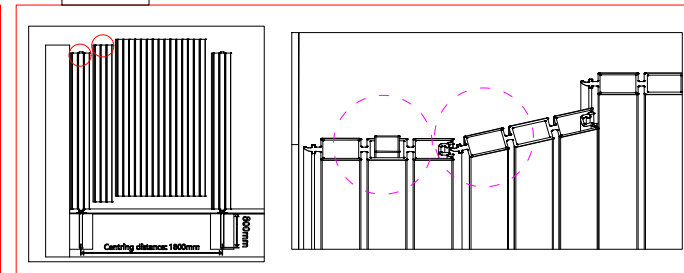


3. When installing the panels, pay attention to the position of the uprights and the orientation of the panels.

4.

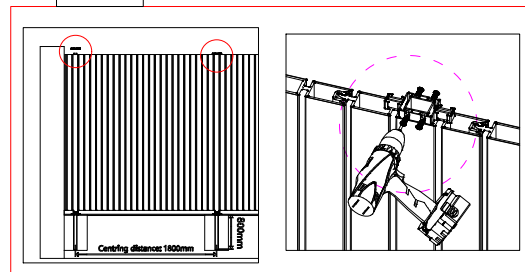


4. Install the top brackets.

5.

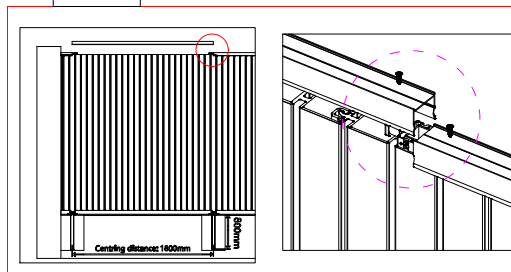

5. Fix the top rails on the brackets.

6.

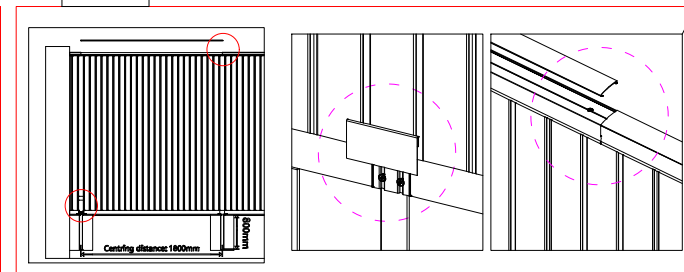

6. Install the top rail cover and the bottom bracket cover.